

# HEADLIGHT DIMMER SWITCH

## COMPONENTS



STEERING COLUMN  
UPPER COVER

HEADLIGHT DIMMER  
SWITCH ASSEMBLY

STEERING COLUMN LOWER COVER

## REMOVAL

1. REMOVE STEERING COLUMN LOWER COVER (See page [SR-9](#))
2. REMOVE STEERING COLUMN UPPER COVER
3. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY
  - (a) Disconnect the connector.
  - (b) Remove the 2 screws and headlight dimmer switch assembly.

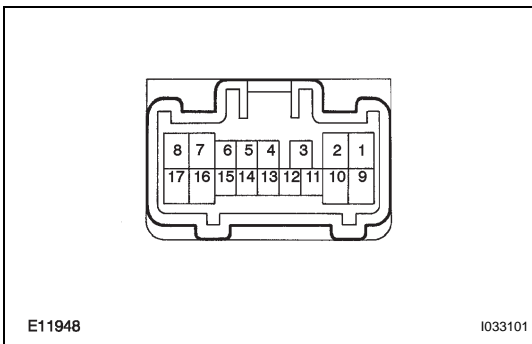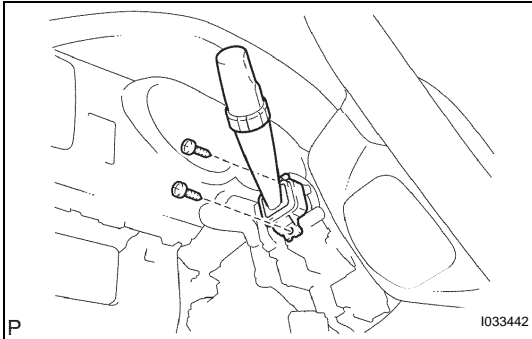

## INSPECTION

1. INSPECT HEADLIGHT DIMMER SWITCH ASSEMBLY
  - (a) Inspect the light control switch continuity.
    - (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
OFF	-	No continuity
TAIL	14 - 6	Continuity
HEAD	13 - 16 - 14	Continuity
AUTO	16 - 12	Continuity

- (b) Inspect the headlight dimmer switch continuity.
  - (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
FLASH	7 - 8 - 16	Continuity
LOW BEAM	16 - 17	Continuity
HI BEAM	7 - 16	Continuity

- (c) Inspect the turn signal switch continuity.
  - (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
Right turn	2 - 3	Continuity
Neutral	-	No continuity
Left turn	1 - 2	Continuity

- (d) Inspect the front fog light switch continuity.
  - (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
OFF	-	No continuity
ON	10 - 11	Continuity