

REMOVAL


1. REMOVE AIR CONDITIONING CONTROL ASSEMBLY

- Remove the screw.
- Release the 4 claw fittings.
- Disconnect the connector and remove the air conditioning control assembly.

DISASSEMBLY

1. REMOVE COOLER CONTROL SWITCH BULB (EXCEPT INDEPENDENCE TEMPERATURE CONTROL)

- Remove the 8 cooler control switch bulbs from the air conditioning control assembly.

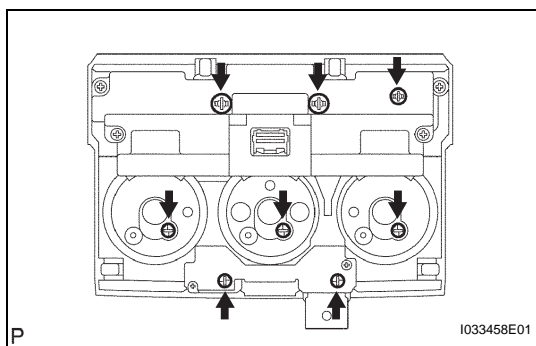

2. REMOVE COOLER CONTROL SWITCH BULB (INDEPENDENCE TEMPERATURE CONTROL)

- Remove the 9 cooler control switch bulbs from the air conditioning control assembly.

