


Trailer Towing

- * 1 : w/ Daytime Running Light
- * 2 : w/o Daytime Running Light

From Power Source System (See Page 58)

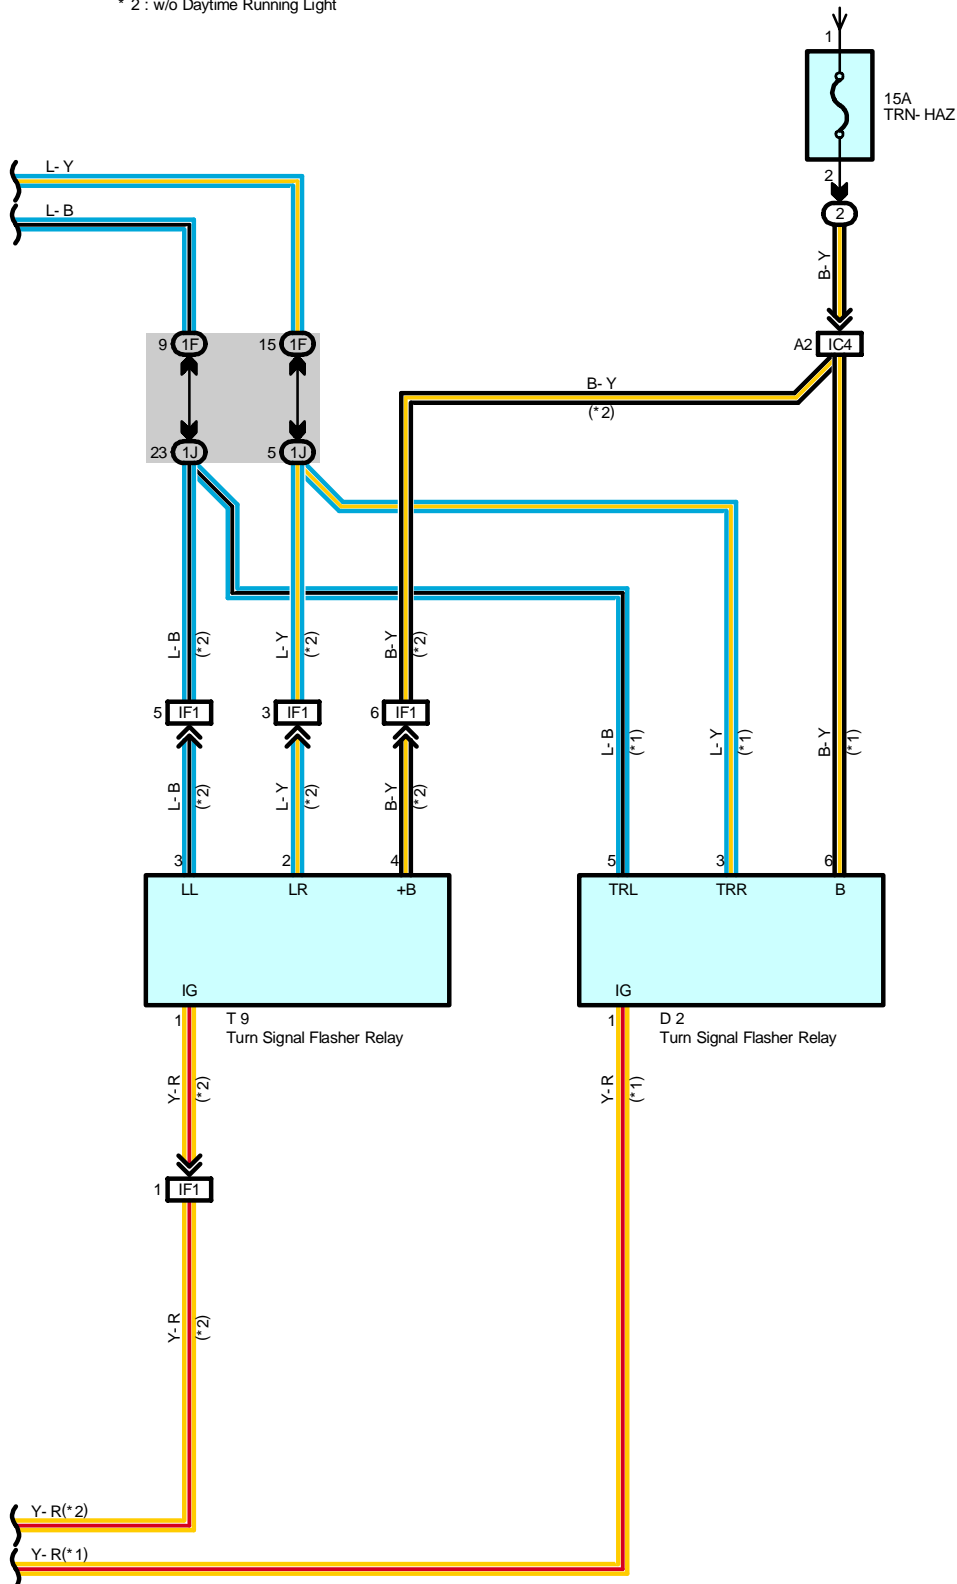

Service Hints

T14 Towing Converter Relay

- 1-Ground : Always approx. 12 volts
- 6-Ground : Always continuity

T15 Trailer Socket

- 1-Ground : Approx. 12 volts with light control SW at TAIL or HEAD position
- 2-Ground : Approx. 12 volts with ignition SW at ON position
- 4-Ground : Approx. 12 volts with ignition SW at ON position and shift lever in R position
- 6-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D2	37	J15 B	38	J41 B	40
J1	33 (2UZ-FE)	J16	38	P1	33 (2UZ-FE)
	35 (1GR-FE)	J20 A	38		35 (1GR-FE)
J2	33 (2UZ-FE)	J21 B	38	S10	39
	35 (1GR-FE)	J22	38	S12	39
J4	38	J25	38	T6	39
J5	38	J33	38	T9	39
J7	38	J39	40	T14	41
J14 A	38	J40 A	40	T15	41

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.3 (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	48	Floor No.2 Wire and Engine Room Main Wire (Left Kick Panel)
IC4	48	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	50	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IF1	50	Instrument Panel Wire and Relay Wire (Behind the Instrument Panel J/B)
IM1	52	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
BF1	54	Frame No.3 Wire and Floor No.2 Wire (Rear Side of Side Frame LH)
BG1	54	Floor No.2 Wire and Frame No.3 Wire (Rear Side of Side Frame LH)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	44 (2UZ-FE)	Front Left Fender
	46 (1GR-FE)	
IG	48	Left Kick Panel
BL	54	Floor Seat Crossmember LH
BO	54	Rear Pillar LH